



CENTRAL PENNSYLVANIA RAILROAD

THROTTLES-UT 1

THE DIGITRAX UT 1 UTILITY THROTTLE IS A VERY BASIC, EASY TO USE THROTTLE. HERE ARE SOME BASIC OPERATING INSTRUCTIONS FOR THE UT 1.

-PLUG IT IN!

-DIAL IN THE TWO DIGIT ADDRESS FOR YOUR LOCOMOTIVE. THEN, PRESS "ACQ".

--IF GREEN LIGHT, YOU'RE GOOD TO GO!

--IF NO LIGHT IS LIGHTED, THE ADDRESS IS ASSIGNED TO ANOTHER THROTTLE; CONTACT DISPATCHER.

--IF RED LIGHT IS LIGHTED, THE DIRECTION OR SPEED IS NOT IN SYNC WITH THE LOCOMOTIVE. ROTATE THE KNOB OR CHANGE THE DIRECTION SWITCH.

-TURN HEADLIGHT ON OR OFF BY PRESSING F0

-TOGGLE SWITCH AT TOP OF UT 1 CHANGES DIRECTION.

--RIGHT-FORWARD; LEFT-BACKWARD; REGARDLESS OF WHICH WAY THE LOCO IS FACING

-WHEN YOU PLUG IN TO A UT3 AT A DIFFERENT LOCATION AND CAN'T CONTROL YOUR TRAIN AND/OR THE GREEN LIGHTS ARE SCROLLING, YOU PROBABLY MOVED THE THROTTLE WHEN IT WAS NOT PLUGGED IN. SIMPLY ROTATE THE THROTTLE UNTIL THE SCROLLING STOPS AND YOU WILL HAVE REGAINED CONTROL.

-WHEN YOUR JOB IS FINISHED RELEASE THE LOCOMOTIVE BY PRESSING "SHIFT & DISP".

3/15/02