

DT 300 INSTRUCTIONS

SELECTING A LOCOMOTIVE (2 digit)

1. Choose L or R knob; press or turn one quarter to activate.
2. Press select button.
3. Turn L knob counterclockwise until 00 appears. Turn R knob until desired address appears.
4. Press select button again.
5. Blinking loco & smoke ICON indicates active throttle.

CHANGING LOCOMOTIVE DIRECTION

1. Press L or R direction key.
2. Arrow under loco icon indicates forward > or reverse < direction.
3. Alternate method-rapidly press active throttle knob twice.

ACTIVATING FUNCTIONS

1. Press function (FN) button.
2. F0, F1, F3 press button; F4 press & hold as long as needed; F5-F8 press & hold FN then press desired button.
3. Click or turn knob to exit FN mode.

DISPATCHING A LOCO OR CONSIST

1. Normal-Press SEL then MODE.
2. Consist-Press MODE MODE & when display shows MU, press N

UT 1 INSTRUCTIONS

GREENLOCO ACQUIRED
DARKLOCO IN USE
REDSAFE MODE - DIRECTION
NOT SAME AS LOCO-
FLIP TOGGLE
STROBING SAFE MODE - THROTTLE
GREENSPEED DOES NOT MATCH
LOCO SPEED - ROTATE KNOB
IN DIRECTION OF STROBE

SELECTING A LOCOMOTIVE (2 digit only)

1. Set address on rotary selectors.
2. Press ACQ/DISP button to select loco.
3. See status indications above.

ACQUIRING A DISPATCHED LOCOMOTIVE

Use same procedures as above.

CHANGING LOCOMOTIVE DIRECTION

Toggle right for forward; left for reverse.

DISPATCHING A LOCO OR CONSIST

Press and hold SHIFT then ACQ/DISP button.

ACTIVATING FUNCTIONS

F0-F3, press desired button.
F4-F6, press & hold shift then desired button.

Turn page for DT 400 Throttle
Instructions.