

DT 400 INSTRUCTIONS

SELECTING A LOCOMOTIVE (2 digit)

1. Choose L or R knob (throttle); press or turn one quarter to activate.
2. When display flashes SEL press LOCO.
3. Use keypad to enter address or turn R knob.
4. Press LOCO; display loco icon blinking smoke indicates active throttle.
5. If STEAL appears, STOP, press ""N" and call CPRR Superintendent or Dispatcher.

CHANGING LOCOMOTIVE DIRECTION

1. Press L or R reverse button or rapidly press active throttle knob twice.
2. Arrow under loco icon indicates forward > or reverse <.

ACTIVATING FUNCTIONS

1. Keypad is usually active in function mode.
2. Press desired numerical button to activate or deactivate a function.

TO CONSIST OR MU

1. Select TOP loco on R throttle.
2. Select loco to be added on L throttle.
3. Move loco's into position.
4. Be sure both are traveling in same physical direction on the track.
5. Press MU button
6. Press "Y"
7. R throttle shows TOP address and is now in control of the consist.

DISPATCHING A LOCO OR CONSIST

Normal: Press LOCO then press DISP.
Consist: Select loco to be removed on L throttle;
Then press MU button; then press "N" button

WRONG BUTTON

If you push the wrong function button,
simply press EXIT.